

USER'S MANUAL



FX-3920

CONTENTS

1.	NETWORK COMPATIBILITY	4
2.	MAINTENANCE.....	5
3.	INSTALLATION	
3.1	Table stand.....	6
3.2	Wall-mounting	7
3.3	Receiver	8
3.4	Telephone.....	8
4.	USING THE TELEPHONE	
4.1	Incoming calls	9
4.2	Answering calls	9
4.3	Ending calls.....	10
4.4	Dialling numbers	10
4.5	Redialling the last number.....	10
4.6	Dialling memories directly	11
4.7	Dialling 2-button memories	11
4.8	Call volume and tone	12
4.9	Muting the microphone.....	13
4.10	* and # buttons	13
4.11	R button.....	14

5.	NUMBER MEMORY	
5.1	Introduction	15
5.2	Programming.....	15
5.3	Dialling	17
5.4	Changing or erasing.....	17
6.	WARNINGS AND USER TIPS	
6.1	General	18
6.2	Installation	18
6.3	Environment.....	19
7.	PROOF OF WARRANTY.....	20

1. NETWORK COMPATIBILITY

This telephone is designed for use on the 'public switched telephone networks (analogue single line)' of telephony and cable companies in all countries of the EU.

However, each provider could require a different connecting wire with plug.

This device meets the essential requirements and other relevant provisions as stipulated by the European Guideline 1999/5/EC.

Loading factor: 50



2. MAINTENANCE

- Only clean the housing with a moist cloth, never use chemical cleaning agents.
- Never place the FX-3920 onto cellulose-treated surfaces; the rubber feet could leave tracks.


<p>Service</p> 	 <p>WWW.FYSIC.COM SERVICE@FYSIC.NL</p>	
<p>Help</p> 	 	<p>NL 073 6411 355 (Lokaal tarief) BE 03 238 5666 (Lokaal tarief) (Tarif local) DE 0180 503 0085 (Lokale Festnetzkosten)</p>
	<p>Hesdo, Australiëlaan 1, 5232 BB, 's-Hertogenbosch, The Netherlands</p>	

3. INSTALLATION


3.1 Table stand:

When using the telephone on a table or desk, you should first attach the table stand to the bottom of the telephone.


1. first, hook this side of the stand into the bottom of the telephone (see 1)

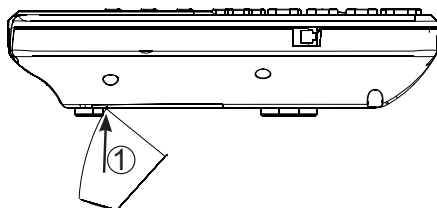

2. now push the other side of the stand into the bottom until the 2 clips lock (see 2), if necessary depress these clips somewhat (see 3)

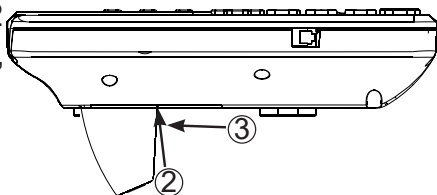


When you want to detach the stand again, press at 3 and remove in the direction of 4.

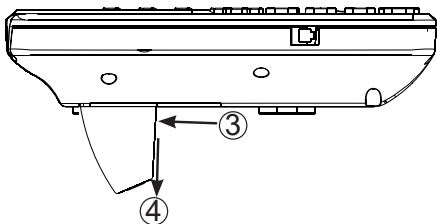


3.2 Wall-mounting:

1. in a vertical line, drill 2 holes at a distance of 8.4 cm from each other and insert plugs and screws; let the head of the screws protrude for 5 mm

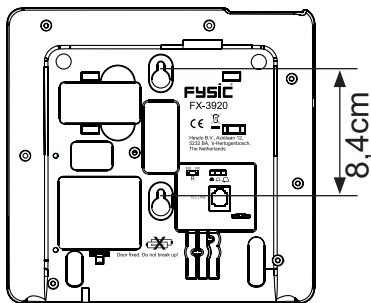

2. slide the receiver clamp out of the telephone, turn it 180° and place it back onto the telephone; this clamp will hold the receiver in case of wall-mounting


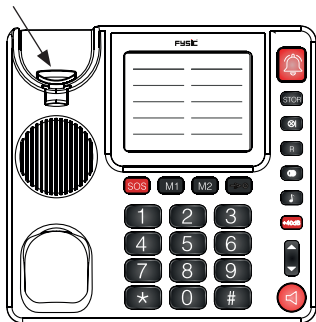


3. hook the telephone with the screw holes over the screws and press it downward
4. fix the telephone wire to the wall using the cable clips

In case of wall-mounting, the table stand is NOT used.

3.3 Receiver:


1. connect the receiver with the telephone by attaching one side of the spiral cable to the bottom of the receiver and the other side to the left side of the telephone

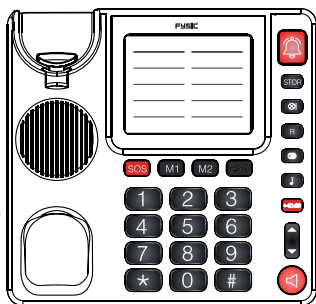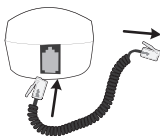

2. push in the plugs until they're securely connected

3.4 Telephone:

1. plug the telephone wire into the bottom of the telephone
2. insert the telephone plug into a telephone wall socket

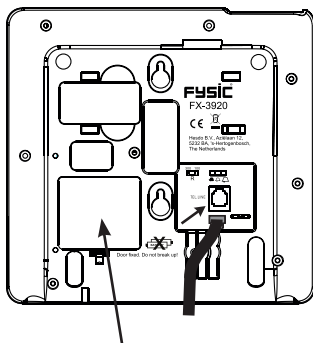

The FX-3920 requires NO batteries

4. USING THE TELEPHONE

4.1 Incoming calls:



adjust the call volume using the call volume switch at the bottom of the telephone:

: high call volume

: low call volume

: mute



the call indicator will also light up when you receive an incoming call; attention: this indicator is NO button.

4.2 Answering calls:



pick up the receiver to have your conversation through the receiver

or



briefly press the speaker button to answer the call in hands-free mode

4.3 Ending calls:



put the receiver back onto the cradle
if using the receiver for the current
call

or

 


press the speaker button again to
end the call if using the speaker for
the current call

4.4 Dialling numbers:



neem de hoorn op of schakel de luid-
sprekerfunctie in



enter the desired phone number

the number will be dialled directly

4.5 Redialling the last number:



pick up the receiver or turn on the
speaker function

 


press the  button to redial the last dialled number

4.6 Dialling memories directly (*):



pick up the receiver or turn on the speaker function



press the **SOS**, **M1** or **M2** button

this number will be dialled

 
4.7 Dialling 2-button memories:



pick up the receiver or turn on the speaker function



press the  button



press the button under which the memory is saved

this number will be dialled

**: for programming the memories, see paragraph 6.2*

4.8 Call volume and tone:



ATTENTION: EXCESSIVE VOLUMES CAN LEAD TO HEARING LOSS. IF MULTIPLE USERS ARE USING THE TELEPHONE, ALWAYS SET THE VOLUME TO NEUTRAL AFTER EACH CALL.



volume

press ▲ to increase the volume or press ▼ to decrease the volume, *these volume buttons control the volume of both the receiver and the speaker*



amplifier:

press the +40dB button to switch on the amplifier, press again to turn off the amplifier, *this function is only available in combination with the receiver*



ATTENTION: DANGER DUE TO THE PRESENCE OF EXTREMELY HIGH MAXIMUM VOLUME



tone adjustment:

press the  button to increase the high tones

attention: this function is only available in combination with an activated amplifier and the receiver

4.9 Muting the microphone:



press and hold this button during a call to turn off the microphone

as soon as you release this button, the microphone will be switched on again

4.10 * and # buttons:




the * and # are buttons mainly used for tele-banking:

- press the * button when requested to press the ASTERISK button
- press the # button when requested to press the POUND button

4.11 R button:



the R button (also called FLASH) is used to briefly interrupt the telephone connection; this brief interruption is used by some home or office switchboards for call forwarding; public switchboards use this button for telecom functions, such call waiting.

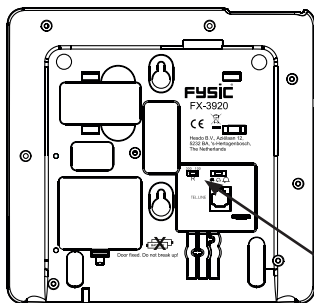

The bottom of the telephone is provided with a small switch for setting the duration of the interruption.

- 100 = 0.1 sec, this is the most common setting in the Benelux
- 300 = 0.3 sec, this setting is often used by company switchboards

For more information regarding this function, please contact your telephone service provider.

5. NUMBER MEMORY

5.1 Introduction:

The FX-3920 offers a direct call memory for 3 telephone numbers and a 2-button numeric memory for 10 frequently used numbers. The maximum length of each memory is 16 digits.

In addition to regular phone numbers, you can also program numbers of mobile phones.


The telephone uses the voltage of the telephone connection to store the memories, eliminating the need for batteries. However, always make sure to keep the telephone connected. A short interruption is allowed, e.g. to quickly move the device, without losing any memories.

5.2 Programming:



place the receiver next to the telephone

press 1x the STOR button

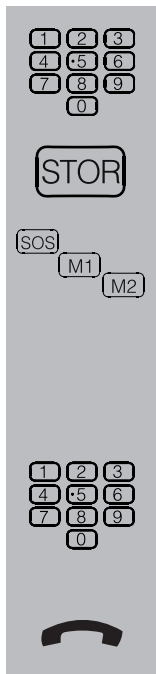

enter the number using the keypad


press 1x the STOR button

press one of the 3 direct memory buttons to store the number as a speed-dial number


or

press one of the 10 numeric buttons to store the number as a 2-button memory call.

put down the receiver

if you want to add a dial pause to the number, e.g. because the phone is connected through a home or office switchboard and 0 must be pressed first to get an outside line, then press the  button at that position in the phone number; while dialling, the telephone will pause for at least 2.5 seconds


5.3 Dialling:

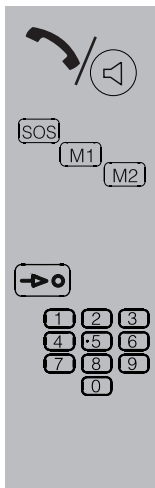

pick up the receiver or switch on the speaker function

press the **SOS** or **M1** or **M2** button

or

press the  button followed by the button under which the memory is saved

the number will be dialled

5.4 Changing or erasing:

You can change a number by programming the new number in the place of the old number. The old number will be overwritten.

You can erase a number by programming a non-existing number (e.g. 000) in the place of the old number. The old number will be erased.

6. WARNINGS AND USER TIPS

6.1 General:

- Carefully read the user's manual and follow all directions.
- Always remove the telephone plug from the telephone wall socket before cleaning the device.
- Never install or use the telephone in wet or moist rooms or environments.
- Ensure adequate heat dissipation; never cover the telephone nor place it directly next to a heat source.
- Make sure not to damage the telephone wire and ensure nobody can fall or trip over it.
- Never disassemble the telephone, only qualified personnel are allowed to do so.


6.2 Installation:

- Only connect/disconnect the telephone wire with/from the telephone when the telephone plug is removed from the wall socket.
- Never install the telephone during thunder storms.
- Never install telephone connecting terminals in wet or moist environments.

- Never touch non-insulated telephone wires unless disconnected from the telephone network

6.3 Environment:



The packaging of this telephone can be collected as old paper. However, we recommend you to save it, to adequately  protect the phone during transport. When replacing this telephone, please return it to the supplier to ensure environment-friendly processing.

7. PROOF OF WARRANTY

For the FYSIC FX-3920 telephone you have a warranty of 24 months from the date of purchase. During this period, we guarantee the free repair of defects caused by material and workmanship errors. All this subjected to the final assessment of the importer.

HOW TO HANDLE: If you notice any defect, first refer to the user's manual. Please contact the supplier of this telephone or contact customer service of FYSIC on telephone number 073 6411 355 (Netherlands), 03 238 5666 (Belgium), 018 0503 0085 (Germany) or via the Internet www.fysic.com.

THE WARRANTY BECOMES NULL AND VOID: In case of improper use, incorrect connections, leaking and/or incorrectly installed batteries, use of unoriginal parts or accessories, negligence and in case of defects caused by moisture, fire, flooding, lightning and natural disasters.

In case of unauthorised modifications and/or repairs performed by third parties. In case of incorrect transportation of the device without adequate packaging and when the device is not accompanied by this warranty card and proof of purchase. The warranty does not cover connecting cables, plugs and batteries. All further liability, especially concerning any consequential damages, is excluded.