

This device meets the essential requirements

and other relevant provisions as stipulated by the European Guideline 2014/53/EU.

http://DOC.hesdo.com/PDX-315-DOC.pdf



(ϵ) v1.0

The Netherlands

and can record a message. The total memory capacity of the answering machine

is 15 minutes. You can use the answering machine directly after purchase. The announcements with which the caller is greeted have been preprogrammed at the factory. See below how you can record your own announcement.

will have the chance to record a message. If you set the function [ANSWER ONLY], the connection will be announcement is deleted and the factory announceisconnected after playing the announcement.

You can listen to and delete the recorded messages through the handset as well as through the base station; you need to set the various functions through the

Setting answering machine functions: Setting and operating of the various answering

machine functions through the handset is menu controlled. The menu structure of the answering machine

1. Open the menu by pressing the key **OK**. 2. Press the keys ▲ and ▼ to select the option [ANS.

MACHINE1. 3. Press the key **OK**; you will access the menu an-

swering machine:

TAM SETTINGS

ANSWER MODE

TAM LANGUAGE

OGM SETTINGS

ANS & REC

ANS & REC

BS SCREENING

CHANGE PIN

ANSWER ONLY

DELETE ALL MEMO TAM ON/OFF

Through the base station:

handset:

Press the key ▶ to start playback **X** = delete this message. = stop playback.

You can opt to answer every call by only playing the announcement, or the caller can leave a message after the beep. Select the option [TAM SETTINGS] - [ANSWER MODE] and choose from [ANS & REC] and [ANSWER ONLY].

Setting the number of rings:

swering machine accepts the call through the option [TAM SETTINGS] - [ANSWER DELAY]. See chapter Remote operation' for the setting [TIME SAVER]

Setting of the maximum recording time: You can limit the maximum recording time for mes-

sage to 60 sec, 120 sec, 180 sec or unlimited through the option [TAM SETTINGS] - [RECORD TIME].

Language of the factory announcements: The answering machine factory has announcements in the English as well as the French language. You can select the desired language through the option [TAM SETTINGS] - [TAM LANGUAGE].

the backside of the phone, and plug the adapter

1. Open the battery compartment of the handset, by

3. Slide the battery cover back onto the handset and

4. Leave the handset continuously during 15 hours on

the base station, to charge the batteries properly.

If your phone has been delivered with multiple hand-

sets, 2 batteries and a charger with adapter will be

included for every handset. Plug the adapter of these

chargers in a 230 Volt mains socket, insert the batter-

ONLY CONNECT THE INCLUDED ADAPT-

ER. CONNECTING OTHER ADAPTERS

ies into the handset(s) and place the handset(s) on

MAY RESULT IN DANGEROUS SITUA-

TIONS OR MAY CAUSE DAMAGE TO THE ELEC-

INSERT ONLY RECHARGEABLE NIMH (NICKEL

METAL HYDRIDE) BATTERIES. THE USE OF NOT

RECHARGEABLE BATTERIES MAY CAUSE DAN-

GEROUS SITUATIONS OR EXPLOSION HAZARD.

1. Press the key phone-on to accept a call.

number will be dialed directly.

more than 2 seconds again

or decrease the volume.

microphone of the handset.

Plaving recorded messages

Through the handset:

1. Press the key phone-off to end a call

OPERATION

Press the phone-on key and wait for the dial tone.

or place the handset back on the base station or

this, pay attention to the polarity (+ and -).

place the handset on the base station

INSTALLATION

Base station: 1. Plug the small connector at the phone cable into the back of the base station (press the connector until you hear a click).

into a 230 Volt mains socket.

sliding the battery cover down.

Extra handsets and chargers:

TRONICS OF THE PHONE.

Answering calls:

Making calls:

End the call:

charger

Key lock:

the charger(s) to charge the batteries.

Handset

2. Plug the phone connector into the phone socket. Mute (microphone off): 3. Plug the low voltage connector of the adapter into

. During the call press the key **R** to give a FLASH The interruption time of the FLASH pulse is adjus-

1. To disable the microphone, shortly press the key C during the call. You can still hear the other party, but they cannot

key C again

2. To enable the microphone again, shortly press the

2. Insert the batteries into the battery compartment; at Search handset:

. Shortly press the key ((• on the base station. During 60 seconds, a signal will sound from the handset, and the word 'PAGING' flashes on the display of the handset. Press the key phone-off to end the signal prematurely.

1. During the phone call, the elapsed call duration is

Quick key bell off: 1. To disable the bell of the handset, press key # dur-

ing more than 2 seconds

displayed on the display.

2. To enable the bell again, press key # during more than 2 seconds.

PHONE BOOK MEMORY

Every handset has a phone book memory with a

capacity of 50 phone numbers of at most 20 digits. You can program a name of at most 12 characters with each number The phone book memory in the handset is connected Redialing: to the function Caller Identification. When you are called by somebody, whose name and number you

have programmed in the memory, the name of this person is also displayed beside the number on the display of your handset. However, for this you need to subscribe to the service Caller Identification.

Programming

1. Press the key I and twice the key **OK** succes-1. Enter the phone number through the keyboard. You can delete an incorrect entry with key C. 2. Enter the name through the keyboard (see the ABC 5. Press the key **OK** twice. 2. Press the phone-on key to dial the number.

on the dial kevs). You can delete an incorrect input with key C. Press the key OK.

2. Enter the phone number through the keyboard; this 4. Enter the number through the keyboard. You can delete an incorrect input with key C.

5. Press the key **OK** 6. Select the desired VIP ring tone for this number, using ▲ and ▼.

7. Press the key **OK** to store the memory.

Dialing:

2. Search the desired memory, using keys ▲ and ▼. 3. Press on the phone key to dial this number.

Changes:

2. Search the desired memory, using keys ▲ and ▼ 1. During the call, press the keys \triangle or ∇ , to increase Press the key OK.

 Search the option [EDIT] with the keys ▲ and ▼, press the key **OK**

5. Use key C to delete the old name and enter the new name through the keyboard.

Select [MEMO] and press the key **OK**; the answering machine will record immediately. Dictate your memo in the microphone of the handset and press the key **OK** at the end to end the recording.

You can play and delete a memo as a normal message

Select [TAM SETTINGS] - [COMPRESSION] to set

the sound quality of the recorded messages. Be aware that good sound quality (low compression) the maximum recording capacity of the answering

Delete all old messages: (new messages that have not been listened to yet, cannot be deleted)

Make sure that the answering machine is idle and keep key X pressed during more than 3 seconds. All old messages are deleted now.

Remote code:

You need a remote code to play your messages remotely. This code is set at the factory to 0000, but it

1. Select [TAM SETTINGS] - [CHANGE PIN] and press the key **OK**. 2. Enter the current remote code (de factory code

0000 or a previously changed code), and press the

kev **OK** 3. Enter the new 4-digit code and press **OK**.

4. Enter the new 4-digit remote code and press OK.

Number of rings at 'setting' 'TIME SAVER': If you have selected the option 'Saving Mode', and no new messages have been recorded, the answering machine will accept the call after 6 rings. If new message have been recorded, the call will be accepted after 2 rings. So if you want to listen remotely, and you hear the phone ring more than twice, no new mes-

Remote operation

is accepted 2. Press the key * (star) during playback of your an-

nouncement. 3. Enter the remote code through the keyboard.

4. Now you have the choice from the next functions: From idle: During playback:

> 4 4 = previous message 2 = delete this message. 5 = stop playback.

9 = disable answering function. 5. Hang up to disconnect.

6. Press the key **OK** 7. Use key C to delete the old number and enter the

new number through the keyboard. 8. Press the key OK table; see for this the chapter PHONE SETTINGS. 9. Select the desired VIP ring tone for this number

2. Search the desired memory, using keys lacktriangle and lacktriangle

Search the option [DELETE] with the keys ▲ and ▼.

with ▲ and ▼.

10. Press the key **OK** to save the corrected memory.

CALLER IDENTIFICATION

Introduction If you have the service Caller Identification at your You can connect (register) up to 5 wireless handsets disposal, the number of the calling party is displayed to the PDX-315. With multiple registered handsets, on the display of your handset(s). If your carrier you can call each other for free in and around the also transmits names, or you have programmed this house and forward calls or even call with three number including name and the phone book memory of the handset, the name is also displayed on the display. The Caller Identification memory has a capac- If the phone has been delivered with one handset, ity of 10 numbers. Attention: when this memory is full, u can purchase extra handsets (*), which you shall every following incoming call will overwrite the oldest register first (see the concerning instructions further in this user manual). If the phone has been delivered call in the memory. with multiple handsets, you can make internal calls

This display indicates whether and how many new

calls are stored in the Caller Identification memory that you have not seen yet. As soon as you have viewed the memory, this notification goes off. Attention: in case of use of 2 or more handsets, you

need to read the Caller Identification memory separately on every handset.

last received call appears on the display.

3. Press the phone key to call back this subscriber.

Copying to the phone book memory: 1. Press the key ▲: the name of the number of the last received call appears on the display.

through the keyboard. 4. Press they key **OK** twice, and select the desired VIP ring tone with ▲ and ▼.

Delete call selectively: 1. Press the key ▲; the name or the number of the

last received call appears on the display

3. Press the key **OK** and select the option [DELETE] with ▲ and ▼.

Delete complete call history: 1. Press the key ▲; the name or the number of the

last received call appears on the display. 2. Press the key **OK** and select the option [DELETE ALL] with ▲ and ▼.

3. Press the key **OK** twice, to delete the complete call

instructions. Never place or use the phone in a wet or moist room or environment

Take care of proper heat dissipation; never cover the phone and/or the power supply adapter(s), and do not place them directly beside a heat source. Use only the included adapter(s); connecting

another type of adapter may cause damage to the electronics. Take care that the cable of the phone and the adapter do not get damaged, and prevent that they

plugged in again cause tripping or falling. Never disassemble the base station, the handset(s), the charger(s) and the adapter(s). This • Clean the phone only with a moist cloth; do not use may only be done by qualified personnel.

Installation:

General

 Connect or disconnect the cables of the phone and the power supply adapter only to the base station when the power supply adapter has been unplugged
It is possible that enabled DECT phones interfere from the mains socket, and the phone connector has been disconnected from the phone socket.

 Do not install the phone during a lightning storm. Do not install a phone connection point in a wet or moist environment.

• Do not touch uninsulated phone or adapter cables, **Environment:** unless they are disconnected from the phone

Power failure:

network or the mains power.

This phone obtains its power supply from the mains power. In case of failure of the mains power, this phone cannot be used. Therefore it is advisable to keep a wired phone in reserve.

Placement

 Do not place the phone in the direct vicinity of other phones or other electronic (medical) devices, TL tubes and other gas discharge lamps; the emitted radio waves of these (and other) wireless phone(s) may disrupt the functioning of the equipment, or Problems with incoming calls: the emitted signals of the equipment disrupt the functioning of the phone.

Power supply handset: · The display of the handset is provided with a built-

in battery capacity meter: **=**: The complete symbol flashes when the batteries are charged. : The indication that the batteries must be

charged We recommend placing the handset every evening on the base station or charger, for optimal use. This does not have an adverse effect on the rechargeable batteries.

be exposed to fire or extreme heat. · Never cut open batteries of battery packs. The content is chemical and poisonous.

Rechargeable batteries or battery packs shall not

Users of older generation hearing aids always shall keep into account a possible uncomfortable buzzing

Hearing aids:

Eavesdropping on a DECT phone is virtually impossible. Not only shall one be within reach of the

TIPS AND WARNINGS

open field and up to 50 meters inside; the range depends on local circumstances. When you get out of reach of the base station, the symbol \(\text{\Pi} \) will start flashing and the text [OUT OF RANGE] appears on the display. In this state, you cannot receive or make any calls. In case the power supply adapter of the base station is unplugged from the mains socket, the handset will lose contact with the base station. the display will display [OUT OF RANGE], and the antenna symbol will start flashing. The handset will restore contact with the base station within several minutes after the power supply adapter has been

any chemical detergents The adapter and the phone cable shall be disconnected before cleaning.

 The packaging of this telephone can be collected as old paper. However, we recommend you to save Other The display stays blank: it, to adequately protect the phone during transport. When replacing this telephone, please return it to the supplier to ensure environment-friendly

You shall dispose of faulty or exhausted batteries at your local depot for small chemical waste, or at the specially designated battery collection points. Never dispose of batteries with the household

POSSIBLE PROBLEMS AND SOLUTIONS

 No notification of incoming calls The bell is disabled; enable it. You are continuously busy:

> Check whether a 2nd phone or a 2nd handset that has been registered with the base station, is using the line. Connect another phone to your phone connection, and use this to check whether the

Problems during calling:

normally and answer the call.

· Noise and other distortions: You are getting out of reach of the base station; reduce the distance.

phone; try another location.

· You do not receive Name or Caller Identification information on the display of your handset. Check whether your carrier transmits these

some providers).

Deregistration of handsets the phone key. Attention: In case the handset is not landsets that are faulty shall be deregistered placed on the base station or the charger, you always You can reset the settings the way they were when 1. Press the key **OK** and select the option [BS SETneed to press the phone-on to accept a call.

2. Press the key **OK** and select the option [DELETE Date and time: At idle, you can display the time on the display of the 3. Press the key **OK** twice, and enter the PIN code handset, an at Caller Identification, the time and date (de factory code 0000 or your own PIN code).

of the call are registered You can chose from the formats day-month-year or month-day-year at [DATE FORMAT], and you can chose from 12 hour or 24 hour time format at [TIME FORMAT]. Enter the time and the date at the respective options [SET TIME] and [SET DATE]. Alarm: (alarm function)

You can set the phone to sound an alarm tone during 40 seconds at a preset moment (or press any key to switch off the signal prematurely). Select ON to enable this function, and enter the alarm time through

The memories stay undisturbed with this reset instructhe keyboard (24 hour system). After this, you can ention. able or disable the snooze function. The alarm is not 4. Make a choice or select 'on' or 'off' with the keys ▲ repeated automatically daily.

Flash time:

A flash pulse is a very short interruption the phone connection. You can set the interruption time of the FLASH pulse on [SHORT] (100 ms), [MEDIUM] (300 ms) or [LONG] (600 ms). 100 ms is the standardized interruption time, and this time is set at the factory. Refer to the user manual of your home or office switchboard or consult your carrier concerning the desired interruption time

At idle, you can display the name or the actual time of

You can name your handset through the option (NW NAME HS). Use key **C** to delete the old name and enter the new name of at most 10 characters through the keyboard. Press the key **OK** to save the name.

nstructions are displayed on the display. Instructions to revert to the English language, in case

you have set a foreign language accidentally:

. Press key ▼ 3 times. 4. Press the kev **OK** once Press key ▼ 3 times.

. Press the key 'phone-off' 3 times.

9. Press the key phone-off to return to the idle mode of the handset

You can change the PIN code, which you need with registering and deregistering of (new) handset, with chapter 'SYSTEEM RESET', in case you have lost or

the phone left the factory, through the option [STAN-

DARD1: Name handset: handset Display language: English Ring volume: level 3 Call melody external call: melody 1 Call melody internal call: melody 2 Reception volume: level 3. Show handset: Key lock: Auto answer Date format: day-month-year 24 hours Hour format: Flash time: short (100 ms)

Factory settings

the handset on the display of the handset, through the option [DISPLAY HS]. Name handset:

Displaying name or time on the handset:

2. Press the key OK once.

6. Press the key **OK** once.

Here you can set the language in which the various

. Select the English language with ▲ and ▼. 8. Press the key **OK** once.

[KEY TONE]: the tones that sound when you press [CHANGE PIN]. The factory PIN code is 0000. See [BATTERY TONE]: the tones that sound when the forgotten the new PIN code [OUT OF RANGE]: the tones that sound when you

> DISPLAY The following symbols can illuminate on the display:



Flashes when u are called from outside: illuminates continuously during a call on the outside line

Illuminates continuously when the alarm function has been enabled; flashes when the alarm goes

available on the FSK network).

The following symbols are: connected to the key (%)OK):

OK When you press the key (so), you confirm the input or choice

C When this icon illuminates, you can delete the input with the key 🔀. If this icon illuminates

Frequency Range: Maximum Power: < 24 dBm

FLASH

You have received a voicemail message (only

Keyboard is locked.

 or ▶ illuminates when the number left or right is longer than can be displayed on the display.

Illuminates when u can open the menu with the key (⊕/oк).

The following symbols are connected to the key (C/R):

➡ Illuminates when can make an intercom call with

SYSTEM RESET (forgot PIN code) If you have lost or forgotten the new PIN code, or if the phone does not respond anymore, you can

completely reset the phone, at which the PIN code is reset to 0000. Take care to deregister the handset(s). You shall register it again. 1. Unplug the adapter from the mains socket. 2. Press the key ((• on the base station AND KEEP

THIS KEY PRESSED. 3. Plug the adapter back into the mains socket (keep key (((• pressed).

phone had been reset 5. Now register the handset(s) again, as described in

chapter 'Multiple handsets'.

DECT / GAP, 5 handsets 1880-1900 Mhz Call history:

Phone book:

through 2 batteries Power supply charger:

300 m outdoors Operational life (with full batteries): stand-by: > 100 uur

Operational temperature: 0°C to 40°C Storage temperature:

warranty of 24 months from the date of purchase During this period, we guarantee the free repair of defects caused by material and workmanship errors All this subjected to the final assessment of the importer. If you notice any defect, first refer to the

case of improper use, incorrect connections, leaking and/or incorrectly installed batteries, use of unoriginal parts or accessories, negligence and in case of defects caused by moisture, fire, flooding, lightning and natural disasters.

In case of unauthorised modifications and/or repairs packaging and when the device is not accompanied

any consequential damages, is excluded.

PDX-315 PDX-315 DUO



Introduction

looks as follows:

The symbol on illuminates on the display

Take over (handset only):

Listening in (base only): Select through the handset the option [TAM SET-TINGS] - [BS SCREENING] to enable or disable the function listening in on the base station.

& RECl or [ANSWER ONLY]: 1. Select [RECORD MESS] and press OK.

You can listen to the announcement through the op-When you press the key C during playback, your own uses more memory, and goes at the expense of

2. Dictate your announcement after the beep into the

3. After the maximum recording time of 180 seconds

the recording is terminated (or press the key **OK**

to terminate the recording prematurely) and the

recording is played back once to check it.

Select the option [MSG PLAYBACK], and press the key **OK**. You can adjust the volume with the keys ▲ The display shows the time and date of the concern-

star will illuminate at the bottom center of the display Press the key **OK** during playback and use the keys ▲ and ▼ to listen to the next or previous messages, to Remote operation:

You can also do this with the numerical keys on the

Key 2: delete this message Key 5: stop playback.

You can set the number of rings after which the an-

6 = next message 4 = repeat message.

Select the option [DELETE ALL] and press the key **OK** twice to delete all old messages.

is highly recommended to change this code:

sages have been recorded and you can disconnect.

1. Call your answering machine and wait until the call

tone when using DECT phones. Eavesdropping:

DECT phone, one also needs expensive equipment.

· Read the user manual carefully and follow all

Problems with the answering machine Does not record messages:

Medical equipment: with sensitive medical equipment. When the phone is kept in the vicinity of the medical device, interference can occur. Do not place a DECT phone on or near a

processing.

You are called from outside during an intercom call; end this call, wait until the phone rings

There are other electrical devices in the vicinity that interfere with the radio waves of your DECT

 The handset does not have contact with the base station: - You are too far from the base station; reduce the The base station has been switched off (adapter from the mains socket); correct this.

The handset is not registered with the base

from their sockets; connect everything again after

In case the failure has not been solved with aforementioned solutions: the power supply adapter and the phone connector

· Remove the batteries from the handset, and unplug

station (anymore); register it (again).

JOHN SMITH

reach of the base station; flashes: the handset is out of reach of the base station.

The recording capacity is full. Free recording capacity by playing the messages and delete

answering function is turned-on

The bell is disabled. Indicates the status of the battery.

functions in the display with the keys and ▲ and

during a phone call, you can disable the microphone with the key 🕬.

Y Illuminates continuously: the handset is within

4. Release the key ((• AFTER 30 SECONDS; the

DTMF & FSK, auto recognition, 10 memories 100/300/600 ms,

adjustable. 50 memories Power supply base station: through adapter in: 100 - 240 VAC 50 Hz off: 6 VDC, 450 mA,

format: AAA (HR03) Power supply charger: through adapter in: 100-240VAC, 50Hz uit: 6VDC, 450mA 50 m indoors

-20°C to 60°C

in use: > 10 uur

user's manual. Please contact the supplier of this telephone or contact the customer service. THE WARRANTY BECOMES NULL AND VOID: In

performed by third parties. In case of incorrect

DECLARATION OF CONFORMITY

The declaration of conformity is available at:



ANSWERING MACHINE The PDX-315 is equipped with a digital answering machine that will accept a phone call in your absence

If you have set the function [ANS & REC], the caller

ANS. MACHINE MSG PLAYBACK

PLAYBACK RECORD MESS ANSWER ONLY PLAYBACK **RECORD MESS** ANSWER DELAY RECORD TIME REMOTE ACC. COMPRESSION

Enabling/disabling answering function (handset You can enable or disable the answering function through the option [ANS. MACHINE] - [TAM ON/OFF].

Press the key phone-on, on the handset to take over the call; the recording will be stopped.

I. To enable the key lock, keep the key * (STAR) pressed for more than 2 seconds. 2. To disable the key lock, keep the key * pressed for

Handset volume

Announcements You can record your own announcements through the A MEMO is a message that you can record for houseption [TAM SETTINGS] - [OGM SETTINGS] - [ANS

ing message. When it concerns a new message, a

Key 4: repeat the message. Key 4 twice: play the previous message. Key 6: play the next message.

delete the message or to stop playback.

Only announcement or announcement + recording

5 = playback 7 = enable answering function.

Delete memory completely: 1. Press the key 🕮 2. Press the key OK

5. Press key **OK** to delete this memory.

Delete memory selectively:

Press the key

3. Press the key **OK**

Memory status

used of the 50 available

display: 15/50 OCCUPIED

pears on the display.

Press the key ...

with ▲ and ▼.

1 Press the key

3. Press the key **OK**

1. Press the key

Press the key OK

number memory

Disconnect

Base station:

Memory full:

Disabling remote functions:

TINGS] - [REMOTÉ ACC.1.

Indicator for new messages:

3. Press the key **OK** twice.

Press the key OK

3. Search the option [DELETE ALL] with the keys ▲ 4. Press key **OK** twice to delete the memory com-

You can see how many storage locations you have

3. Search the option [PB STATUS] with the keys ▲

4. Press the key **OK**; the following appears on the

5. Press the key phone-off to return to the idle mode

LAST NUMBER MEMORY

1. Press the key o, the last number you dialed ap-

Search the desired number with ▲ and ▼.

3. Press on the phone key to dial this number.

Search the desired number with ▲ and ▼.

6. Select the desired VIP ring tone for this number

Copying to the phone book memory:

Enter the name through the keyboard.

Press the key **OK** to store the memory.

Delete last dialed number selectively:

2. Search the desired number with ▲ and ▼.

Select the option [DELETE] with ▲ and ▼.

Delete the complete last number memory:

Enabling the answering function remotely:

2. Press the key * and enter the remote code.

1. Call your own phone number and wait until the

3. Press the key 7 to enable the answering function.

You can disable remote operation of the answering

machine completely through the option [TAM SET-

If new messages have been recorded, the LED will

If new messages have been recorded, the answering

machine symbol (50) will flash on the display

announcement 'ANSWER ONLY'

The display of the handset displays 'TAM FULL'.

Every new incoming call is now answered with the

Now listen to all messages and delete some or all.

answering machine accepts the call after 10 rings.

Select the option [DELETE ALL] with ▲ and ▼.

4. Press the key **OK** twice, to delete the complete last

5. Press the key **OK** to delete this memory.

In this example, 15 of the 50 memories are in use.

View memory and callback:

1. Press the key ▲; the name or the number of the 2. Browse through the memory by using ▲ and ▼. When a name is displayed, press the key # to view the number. Press the key **OK** and select DETAILS, to view the time and date of the call.

Search the desired call with ▲ and ▼. Press the key **OK** twice, and enter the name

5. Press the key **OK** to store the memory 6. Press the key phone-off to return to the idle mode of the handset

2. Search the desired call with ▲ and ▼. 4. Press the key **OK** to delete this call

> Registration 1. Keep the key ((• on the base station pressed, until a beep tone sounds after approximately 8 seconds. 2. Press the key **OK** and select the option [REGIS-

> > The handset will search for the concerning base station. 4. After a few seconds a beep tone will sound from the handset, and the handset has been registered Answering automatically: At the right side of the display the internal number When the function [AUTO ANSWER] is enabled, you of this handset is displayed (1~5). can accept calls by only taking the handset from the

3. Press the key **OK** and enter the PIN code (de fac-

tory code 0000 or your own PIN code) and press

MULTIPLE HANDSETS

* Pay attention to the fact that these shall be 'GAP

COMPATIBLE' handsets. GAP means that handsets

and base stations of other types and/or brands are

been registered with your In case more than 2

phone, the other handset handsets have been

3. You can make the intercom call, as soon as the

1. During the call with the outside line, press the key

been registered with your In case more than 2

phone, the other handset handsets have been

In case 2 handsets have in use:

More than 2 handsets

registered with your

phone, you need to

enter the number of

the desired handset (of

press key 9 to call all

More than 2 handsets

registered with your

phone, you need to

enter the number of

the desired handset (of

press key 9 to call all

As soon as the called

handset answers, press

the key * (star) during

2 seconds; the outside

line is now included.

Conference:

TINGS1

tered now.

ntroduction

Menu structure:

RING SETUP

PHONEBOOK

BS SETTINGS

BS RINGER

DELETE HS

FLASH TIME

CHANGE PIN

Basics ring tones:

to set the volume.

Ring tones handset:

and 'volume-off'.

the option [TONE SETUP]

batteries are low.

get out of reach.

your carrier for this.

some or all of them.

entered.

function: enable it.

Handset tones:

set the ring tones of the handset:

RING VOLUME

want to deregister (*).

4. Press the key \mathbf{OK} and select the handset that you

Press the key **OK**; the selected handset is deregis-

* Attention: you cannot deregister your own handset.

PHONE SETTINGS

. Browse through the menu options by using ▲ and ▼

Open the menu by pressing the key **OK**.

3. Press the key **OK** to open the desired option.

5. Finally, press the key **OK** to save the settings.

The menu structure of the phone looks as follows:

Select the option [BS SETTINGS] - [BS RINGER] to

Select de option [BS SETTINGS] - [RING VOLUME]

You can choose from 5 volume levels and 'volume.

Select the option [HS SETTINGS] - [RING SETUP] to

You can set different melodies for intercom calls

(INT. RING) and calls from outside (EXT. RING).

- At 'volume', you can choose from 5 volume levels

You can enable or disable the following tones through

base station or charger; then you do not need to use

memory of your handset; program it.

memory, but the accompanying phone number

has been programmed without area code;

program the number including area code.

The answering machine is set to [ANSWER

answering machine shall be set to 'ANS & REC'.

ONLY1. For recording of messages, the

At 'melody', you can choose from 5 different melo-

You can choose from 5 different melodies

set the ring melodies of the handset

HS SETTINGS

ALARM

DFFAULT

REGISTRATION

ANS. MACHINE

RING SETUP

TONE SETUP

LANGUAGE

RENAME HS

HS DISPLAY

AUTO ANSWER

DATE & TIME

Introduction:

and forward calls directly.

1. Press the key C.

2. 2 handsets in use:

will ring immediately.

called handset answers.

Forwarding/conference:

2. 2 handsets in use:

will ring immediately.

As soon as the called

on the phone-off key:

the outside line is now

handset answers, press

OK twice.

3. Forwarding:

forwarded.

the key **OK**.

In case 2 handsets have in use:

 You do receive the numbers on the display of your The range of the phone is up to 300 meters in the phone, but not the name. The carrier does not forward names; consult The name has not been programmed in the The name has been programmed in the

Maintenance:

medical device, not even when it is in standby mode.

malfunction originates from your connection or · Beep tones during an intercom call:

Problems with Caller Identification:

signals (you shall subscribe to this service with

 Cannot be operated remotely: - You call with a dial phone. The answering machine can be operated remotely by a tone phone only. You have entered the wrong remote code.

The answering machine can only be operated

remotely when the correct remote code is

You have disabled access to the remote

The batteries are empty. Place the handset of

on the base station or the charger and charge

The batteries have not been inserted; check this

Check the charging contacts of the base station

or the charger and of the handset, and clean

The batteries shall be replaced; replace them.

the base station or on the charger to charge the batteries, and let the handset charge during at least 15 hours uninterrupted. The handset does not switch on:

the batteries for 15 hours.

The batteries get low too fast:

them if necessary.

You can also contact the Teleline service center or the supplier of this phone.

⇒ Flashes during connecting an intercom call; illuminates continuously during an intercom call.

Illuminates when u can show more numbers or

⇒ When you press the key 🕬 now, you will go one step back in the menu.

voltage: 1.2 V capacity: 300 mAh material: NiMH

WARRANTY For the PDX-315 DECT telephone you have a

transportation of the device without adequate by this warranty card and proof of purchase. The warranty does not cover connecting cables, plugs and batteries. All further liability, especially concerning