 


# Lenco

---

## STEREO FM RADIO WITH MP3 CD PLAYER SCD-24 MP3

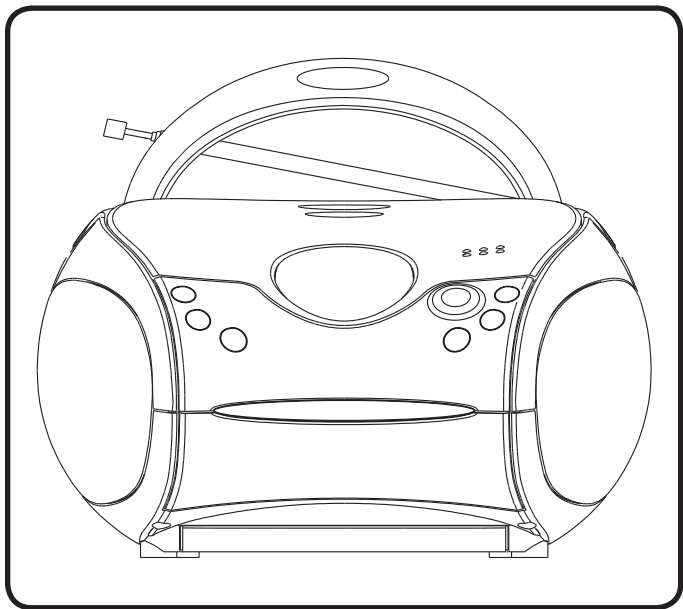

### INSTRUCTION MANUAL

For information and support, [www.lenco.com](http://www.lenco.com)

## WARNING

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL À LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1

CAUTION  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED.  
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

**Warning: Do not touch the lens.**

**DO NOT THROW BATTERIES IN FIRE !**

## PRECAUTIONS

Follow the advice below for safe and appropriate operations.

### ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

### ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

### ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

### ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates (not in tropical climates).
- Do not expose the apparatus to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.

**Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.**



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**

 
 
 
**ATTENTION :** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.  
**THE MARKING PLATE IS LOCATED AT THE BOTTOM OF ENCLOSURE OF THE APPARATUS.**

## LOCATION OF CONTROLS

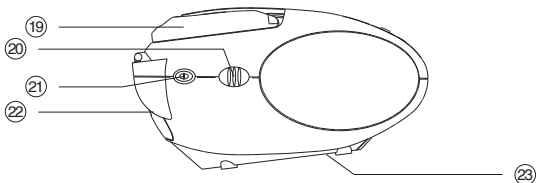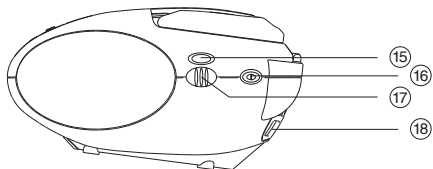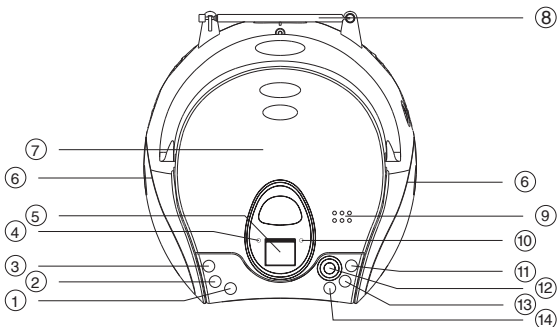

1. CD FOLDER UP BUTTON
2. CD PLAY MODE BUTTON
3. BBS BUTTON
4. POWER INDICATOR
5. CD DISPLAY
6. SPEAKER
7. CD DOOR
8. TELESCOPIC ANTENNA
9. OPEN / CLOSE CD BUTTON
10. FM STEREO INDICATOR
11. CD NEXT BUTTON ►►
12. CD PLAY / PAUSE BUTTON ►►

13. CD BACK BUTTON ◀◀
14. CD STOP BUTTON ■
15. DIAL SCALE
16. MODE SWITCH
17. TUNING CONTROL
18. AC SOCKET
19. CARRYING HANDLE
20. VOLUME CONTROL
21. FUNCTION SWITCH
22. PHONES JACK
23. BATTERY COMPARTMENT

## POWER SUPPLY

 
 
### USING HOUSE CURRENT

Before use, check that the rated voltage of your unit matches your local voltage.


Note: plug is used as the disconnect device.  
the disconnect device shall remain readily operable.

### USING BATTERIES

Disconnect the AC power cord from the AC inlet of the unit. Battery power is cut automatically by the cord while it is connected.

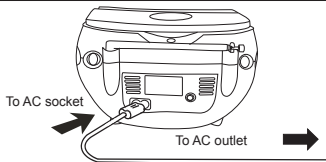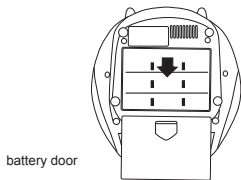


 If volume decrease, or the sound distorts, replace all of the batteries with new ones.

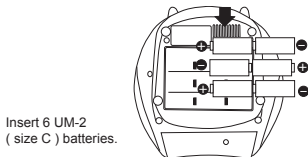

## ADJUST VOLUME
 
### TO ADJUST THE VOLUME

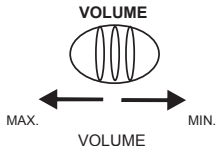

### FOR PRIVATE LISTENING

Plug in headphones ( $\varnothing 3.5$  mm stereo mini-plug) to the PHONES jack.

 
When headphones are plugged in, the speakers are automatically disconnected.

## LISTENING TO THE RADIO


1. Set to RADIO




3. Tune in to a station.

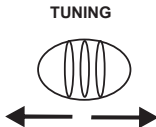

 2. Select a MODE.

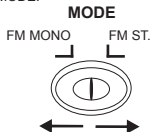

 4. Adjust the sound.

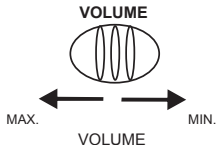

## FOR FM RECEPTION PULL OUT ROD ANTENNA



**NOTE :** 1. FM stereo LED indicator lights if receive FM stereo broadcast and the MODE switch set on "FM STEREO".

2. When too much noise is heard during FM STEREO reception, set MODE switch to FM mono.

### AFTER LISTENING

 
Set the FUNCTION selector to OFF.

## COMPACT DISC PLAYBACK

1. Set to CD



2. Open the CD door by pushing CD Door Open / Close button.

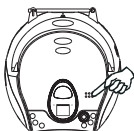

3. Insert a disc with the label side facing up.



4. Close the CD door.

The disc will rotate and the total tracks of the disc will show on the display.

5. Press the PLAY/PAUSE button.

 
Track number "01" & the symbol "▶▶" & "DISC" will be shown during normal compact disc playback. Track number "001", the symbol "▶▶" & "DISC & MP3" will be shown during MP3 playback. Track number "001", the symbol "▶▶" & "DISC & WMA" will be shown during WMA playback.



WMA display




MP3 display



CD display


### TO INTERRUPT PLAYBACK

 Press the Play/Pause button and the symbol "▶▶" will be flashing. Press the button again to resume playback.



### TO STOP PLAYBACK

 
Press the STOP button and the display shows the total tracks of the disc.



WMA display



 MP3 display



CD display

### TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the ◀◀▶▶ skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- When the ◀◀ button is pressed once during play, the previous track starts again.
- When the ▶▶ button is pressed once during play, the next track plays.



### SEARCHING FOR A PASSAGE WITHIN A TRACK

 
- Keep the ◀◀ or ▶▶ button pressed during playback, and release the button as soon as you recognise the desired passage. Then normal CD playback will resume from this point.

Unit will be automatically off within 15 mins without any operation (in stop mode / CD door open).

After auto off, slide the FUNCTION selector to OFF position and then slide to RADIO / CD position for listening.

## REPEAT , REPEAT FOLDER , REPEAT ALL AND MIX PLAYBACK

Press PLAY MODE button during stop mode. CD plays with a single track repeat, all tracks repeat or randomly.



### FOR NORMAL COMPACT DISC PLAYBACK

Mode sequence REPEAT >> REPEAT ALL >> MIX >> CLEAR.

During Repeat 1 mode, the word " REP " will be flashed on the display.



During Repeat 2 mode, the word " REP. ALL " will be shown on the display.



During Mix mode, the word " MIX " will be shown on the display.



CD display

### FOR MP3 / WMA PLAYBACK

Mode sequence REPEAT >> REPEAT FOLDER >> REPEAT ALL >> MIX >> CLEAR.

During Repeat 1 mode, the word " REP " will be flashed on the display.



During Repeat 2 mode, the word " FOLDER & 001 " will be flashed on the display.



During Repeat 3 mode, the word " REP. ALL " will be shown on the display.



During Mix mode, the word " MIX " will be shown on the display.



 
MP3 / WMA display

Note on CD-R/RW discs

- Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.
- Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.
- It is recommended to record only audio files on CD-R/RW discs for easy reading.


## FOLDER UP

For MP3/WMA playback, when the unit is at STOP mode, skip up to next folder/album by using the " FOLDER UP " button and it will show the folder/album number; press the PLAY/PAUSE button to start the playback of the selected folder/album. When the unit is at MP3/WMA PLAYBACK mode, skip up to next folder/album by using the " FOLDER UP " button and the folder/album number will flash for 3 seconds; then it will start the playback of the selected folder/album.

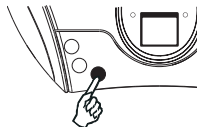

## BASS BOOST

 To enjoy a BASS BOOST sound effect, press BBS button.

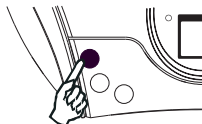

## MAINTENANCE

 
### CLEANING A CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.



### CLEANING THE CD LENS

If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.



### CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

### IMPORTANT NOTE

If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

### WARNING

Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This is resolved by closing the CD door.

## SPECIFICATIONS

### CD SECTION

Channels:	2 channels
S / N ratio:	60 dB
Sampling frequency:	44.1 kHz 8 x over sampling
Quantization:	1 bit DA converter
Pick up light source:	Semi-conductor laser
Pick up wave length:	790 nm

### RADIO SECTION

Tuning ranges:	FM 87.5 - 108 MHz
Antennas:	FM Rod antenna

### GENERAL

Output power:	1 W + 1 W (RMS)
Power consumption:	13.5 W
Speaker:	3 " 8 OHM
Phones jack:	3.5MM
Power source:	AC : 230V ~ 50Hz DC : 9V ( 6 x 1.5V LR14/ "C"/UM2 )

Dimensions:	224(L) x 234(D) x 126(H)mm
Weight	1.45 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

## Service and support

For information: [www.lenco.com](http://www.lenco.com)

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

**Important note:** It is not possible to send products that need repairs to Lenco directly.

**Important note:** If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.



Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

The declaration of conformity may be consulted at

<http://www.lenco.eu/supportfiles/CE/45980gikdg9045.pdf>



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

®All rights reserved