




1 Install batteries

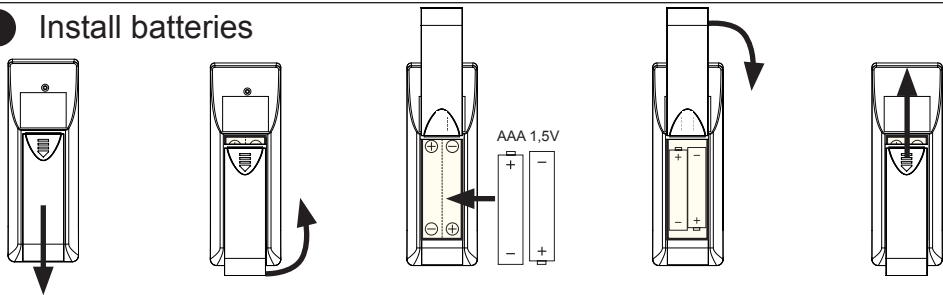


2 Install plug

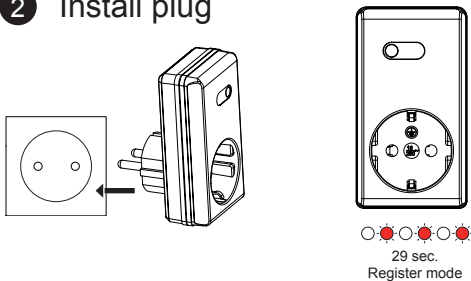


3 Register

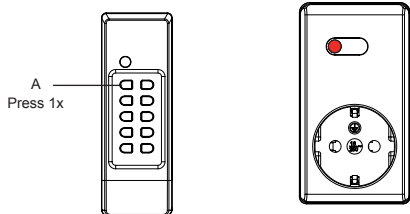


4 Repeat for each plug

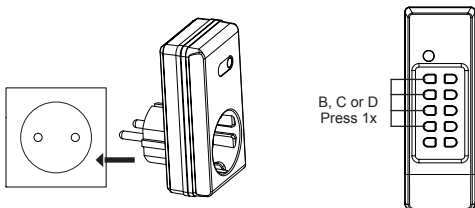


5 Use - turn off

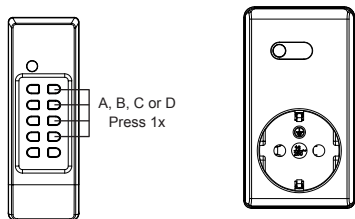


6 Use - turn on

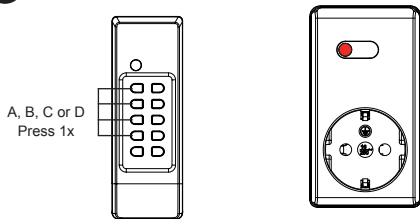


7 Use - turn all off/on

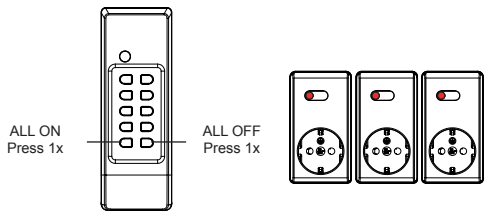



8 Register two units to one button

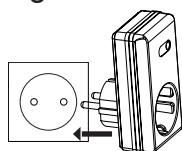


Plug 1

 


A
Press 1x

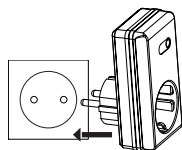 


Plug 2

 


A
Press 1x

 



9 Register two buttons to one unit

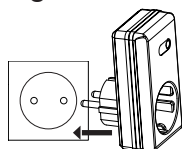



Plug 1

 


A
Press 1x

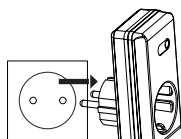 





Plug 1

 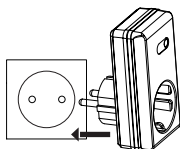


B
Press 1x

 



10 Reset

  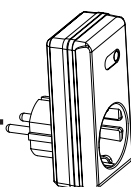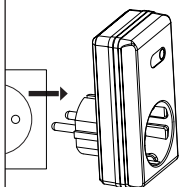

29 sec.
Register mode

 

ALL OFF
HOLD 5s

  

Technical Specifications: The declaration of conformity is available from: <http://DOC.hesdo.com/AR-03-DOC.pdf>

250VAC / 50Hz

16(2)A (3600W)

For indoor use only

433,92MHz

< 37dBm

24 bits code

30M range

Service



Help



WWW.ALECTO.NL
SERVICE@ALECTO.NL

Hesdo, Australiëlaan 1, 5232 BB,
's-Hertogenbosch, The Netherlands

Alecto

