


## TTA-080SI

### Center stabilizer with Party LED Light for Turntable

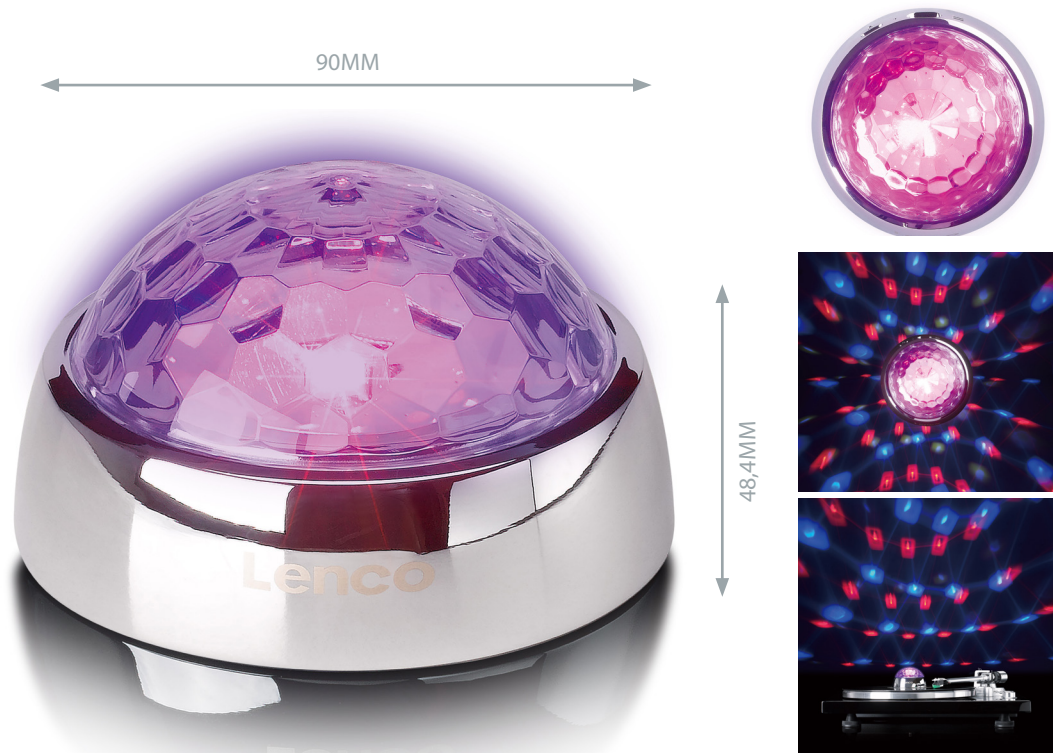

Turntable not included

#### EN

- Center stabilizer for Turntable (250Gr.)
- Discoball for Turntable
- Metal finish of housing
- Will rotate with the record
- Music sensor adjustable in 5 levels
- RGB light effects
- Integrated rechargeable battery 3,7V 1400mAh
- Battery capacity: up to 8 hours
- Included : USB-C Cable
- Connections: USB-C

#### DK

- Centerstabilisator til pladespiller (250Gr.)
- Discoball til drejeskive
- Metallfinish på huset
- Vil rotere med pladen
- Musiksensor kan justeres i 5 niveauer
- RGB-lyseffekter
- Integreret genopladeligt batteri 3,7V 1400mAh
- Batterikapacitet: op til 8 timer
- Medfølger: USB-C kabel
- Forbindelser: USB-C

#### SE

- Centrumstabilisator för skivspelare (250Gr.)
- Discoboll för skivspelare
- Metallfinish på höljet
- Kommer att rotera med skivan
- Musiksensor justerbar i 5 nivåer
- RGB ljuseffekter
- Integrerat uppladdningsbart batteri 3,7V 1400mAh
- Batterikapacitet: upp till 8 timmar
- Ingår: USB-C kabel
- Anslutningar: USB-C

#### PL

- Środkowy stabilizator do gramofonu (250 gr.)
- Kula talerzowa do stołu obrotowego
- Metalowe wykończenie obudowy
- Obraca się wraz z płytą
- Czujnik muzyki regulowany w 5 poziomach
- Efekty świetlne RGB
- Wbudowany akumulator 3,7V 1400mAh
- Pojemność baterii: do 8 godzin
- Zawartość dostawy: Kabel USB-C
- Połączenia: USB-C

#### DATA

- Power source: DC 5V / 1A
- Rechargeable battery : DC 3.7V 1400mAh
- Dim. unit : 90 x 90 x 48,4 mm (WxDxH)
- Dim. Gift box : TBC mm (WxDxH)
- Net/Gross Weight: 250 Gr./ TBC
- Inner/Master carton quantity : 4pcs / 20pcs
- EAN-code: 8711902086680
- Custom code: 9405494000

#### Container quantity :

- 20' ft : 22540
- 40' ft : 47040
- 40' HQ : 53760

Subject to changes without prior notice

