正面(Front)

背面(Back)

296MM

525MM

Lenco

Portable radio with CD and Bluetooth
SCD-32 BT

INSTRUCTION MANUAL

For information and support, www.lenco.com

WARNING

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
WARNING: IN ADDITION TO DISCLOSED LASER RADIATION, INVISIBLE LASER RADIATION MAY BE DISCLOSED WHEN OPENED.

CAUTION
INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED
AVOID EXPOSURE TO BEAM

This product contains a low power laser device.

Warning: Do not touch the lens.
DO NOT TOPPUP BATTERIES IN FIRE !

CAUTION

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the device for ventilation.
2. Install in accordance with the supplied user manual. Keep radiators, stoves, cookers and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Avoid exposing the device to dripping or splashing.
3. Avoid using the device near strong magnetic fields.
4. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device. Following the instructions for use, it should not be possible to disturb the device with electrostatic discharge during normal usage.
5. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and incorrect usage may cause electrical shock. In the event of problems, switch off the device and contact a qualified repair shop. Keep liquid out of the product.
6. Do not place the device in wet areas such as bathrooms, steamy kitchens or near swimming pools.
7. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
8. Do not use the device if you suspect lightning may occur. When the unit is used in a warm and room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly. Let the unit stand in power OFF for 1 or 2 hours and wait until the moisture has evaporated before switching the unit on.
9. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that some faults may occur. If you notice any abnormalities in the device, please contact your retailer. In case of fraud or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
10. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
11. Media may burn animals. Some animals enjoy biting on power cords.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.
13. Cleaning: It is not impossible for damage to the case caused by malfunction, misuse, modification of the device or battery replacement.
14. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
15. Only use attachments/accessories specified by the manufacturer. Do not use any other power cord than the one that is delivered with this device. Don't use an USB extension cable because it can cause interference resulting in failing of data.
16. Do not use this device during a thunderstorm. Do not use damaged mains cables.
17. This device is not intended for use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they have been given instruction or have received instructions about the correct use of the device by the person who is responsible for their safety.
18. This product is intended for non professional use only and not for commercial or industrial use.
19. Unauthorized alterations to this device may disturb electromagnetic radiation. If you notice an acceptable position disturbance or physical injury to follow any other warning or precaution contained within this user manual will not be covered by the guarantee.
20. Never remove the casing of the device.
21. Never place this device on other electrical equipment.
22. Do not allow children access to plastic bags.
23. Only use attachments/accessories specified by the manufacturer.
24. Do not use this device near water for example, near a bathtub, washbowl when the device has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or when some objects have fallen into the device, when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
25. Protection against short circuits and overloaded mains sockets. Use a multiple socket-outlet with overload and earthing fuse.
26. If the product is delivered with power cable or AC power adapter:
Connect the AC power adapter to an easily accessible electrical outlet. Disconnect the AC power adapter from the outlet if you don't plan on or plan the power adapter. Be very careful, particularly near the plugs and the cable's exit point. Do not overload the power cable or AC power adapter. Overloaded power cables or adapters can result in electrical shocks. Avoid placing with the power cable, they can seriously injure themselves.
Unplug the device during lightning storms or when unused for a long period.
Do not pull on the power cable when unplugging the power cable from the outlet. Never touch the cable with wet hands as it could cause a malfunction or electrical shock. Overloading can cause fires or electric shock.
Ensure that the power cable is placed safely to avoid tripping over the cable. Do not place other items on the cable.
Devices with class 2 construction do not require a earthed connection.
Devices with class 1 construction do not require earthed connection. Use only the supplied power cord. Do not pull the power cord. This can cause a short circuit. Don't do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
27. If the product contains or is delivered with a remote control containing coincell batteries:
Keep batteries out of reach of children. Do not swallow batteries, chemical burn hazard.
(The remote control supplied with) This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
28. Caution about the use of Batteries:
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
Battery cannot be established to high or low extreme temperatures, low air pressure or high altitude during use, storage or transportation.
Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting a battery, that can result in an explosion.
Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
Attention should be drawn to the environmental aspects of battery disposal.

INSTALLATION
Place the unit on a flat and remove protective material.
Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.

LOCATION OF CONTROLS

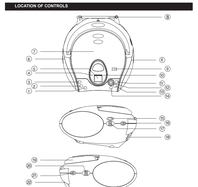

1. PROGRAM BUTTON
2. REPEAT BUTTON
3. BASS BOOST BUTTON
4. STOP/TUNING INDICATOR
5. DISPLAY
6. SPEAKER
7. AC CORD
8. TELESCOPIC ANTENNA
9. OPEN/CLOSE BUTTON
10. ▶II PLAY/PAUSE BUTTON
11. ▶▶I NEXT/FAST FORWARD BUTTON
12. I◀◀ BACKFAST BACKWARD BUTTON
13. ■ STOP / BLUETOOTH ( ) BUTTON
14. FUNCTION BUTTON
15. MODE SWITCH
16. TUNING CONTROL
17. VOLUME CONTROL
18. CARRYING HANDLE
20. VOLUME CONTROL
21. FUNCTIONSWITCH
22. PHONES OUTPUT
23. BATTERY COMPARTMENT

GB 1

POWER SUPPLY

DENS HOUSE CURRENT
Before use, check that the rated voltage of your unit matches the local power supply.



USING BATTERIES
Disconnected the AC power cord from the AC inlet of the device when power is cut automatically by the cord while it is charging.

WARNING: DANGER OF EXPLOSION AND / OR LEAKAGE FLUID OR FLAMES

Battery Block

ADJUSTING THE SOUND

TO ADJUST THE VOLUME

FOR PRIVATE LISTENING
Plug in headphones (jack: 3.5mm stereo plug) to the PHONES jack.
The speakers will be disabled when plugged in; the speakers are automatically disconnected.

LISTENING TO THE RADIO



GB 2

REPEAT PLAYBACK

This function allows a single track or all tracks on a disc to be played repeatedly.

TO REPEAT THE SAME TRACK:
Press the "REPEAT" button once during playback. The CD display will indicate " REPEAT ".

TO REPEAT THE WHOLE DISC:
Press the "REPEAT" button twice until " REPEAT ALL" displays.

TO CANCEL REPEAT PLAYBACK FUNCTION:
Press the REPEAT button again until " REPEAT " or " REPEAT ALL " disappears from the display.

Note on CD-R/RW discs:
Playback of non-standardized format definition production of CD-R/RW, playback quality and performance are not guaranteed.
Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC, performance, software, and the quality of the media.
Do not attach a seal or sticker to either side of the CD-R/RW disc. It may cause a malfunction.
It is not recommended to record only audio files on CD-R/RW discs for easy reading.

BASS BOOST

To enjoy a BASS BOOST sound effect, press the Bass Boost button.

PROGRAM PLAYBACK

PROGRAMMING PLAYBACK
1. Press the "PROGRAM" button in stop mode or after it is played in the desired order. Up to 20 tracks can be programmed.
2. Press the "NEXT" button to select the desired track number.
3. Press the "PROGRAM" button again to memorize the track.
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press the "PLAY/PAUSE" button to start.
6. Press the "STOP" button twice to cancel and erase current CD display.
7. Press the "STOP" button to stop programmed playback.
8. Press "PLAY/PAUSE" button to resume programmed playback.
9. Programmed CD disc turn off the CD player or press "STOP". button twice to clear the programmed memory.

Note - Programming can only be made when the player is in stop mode.

GB 4

BLUETOOTH OPERATION

Set the mode to FUNCTION

2. Long press to button to activate Bluetooth.

a singal sound is heard.



3. Press the PAIR button and search for "LENCO SCD-32BT".
The " bt " sending is flashing during pairing.

4. Long press to connect.
a singal sound is heard.

5. After successful connection start music play on the Bluetooth device.

Next time you switch on the unit, the device connects to the last paired device automatically.
The music streaming may be interrupted by obstacles between the device and the unit, such as walls, or other devices nearby that operate in the same frequency.
Unit will be automatically off after 10 mins without further operation.

MAINTENANCE

CLEANING A CD
If the CD-player is will not play, the disc may need clean. Clean the disc with a cloth in a straight line from the center to the edge. Do not use any chemicals on this unit. Clean by lightly wiping with a soft cloth.

CLEANING THE LENS
After long time use, it may occur a dirt or a brush stroke. Slow several times on the lens and remove the dust with the brush. The brush can be removed with a cotton bud moistened with alcohol.

CLEANING THE UNIT
Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

Storage
Remove the CD-player beforehand the matching of the CD is completed, a jarring noise may occur. This is resolved by closing the CD door.

SPECIFICATIONS

CD	
S/R ratio	56 dB
Frequency response	20 Hz - 20 Hz (oversampling)
Quantization	1 bit DA converter
Laser type	Semiconductor
Radio	
Frequency range	FM 87.5 - 108Mhz
Antenna	Telescopic
Bluetooth	
Version	5.1
Range	10m
General	
Input voltage	AC 230V~ 50Hz
Power consumption	18 W
Output power	1W + 1W (RMS)
Speaker size	4"
Speaker impedance	4 Ohm
Phones output	3.5mm Jack
Battery specification	6 x 1.5V UM-2(C(LR14))
Dimensions	315 x 214 x 120mm (wxdxh)
Weight	1.45kg

Commaxo International reserves the right to change the contents of this document without notice.

DECLARATION OF CONFORMITY

Hereby, Commaxo declares that the radio equipment type Lenco SCD-32BT(LR) is compliant with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
http://www.lenco-certificates.com/bt/scd-32bt_eu.pdf

Type RF	Frequency range (MHz)	Power (dBm)
Bluetooth	2402-2480	< 6
FM	87.5 -108	< 15

Avoiding hearing damage:
To prevent possible hearing damage, do not listen at high volume levels for long periods.

Disposal
Follow the information and helpdesk support, please visit www.lenco.com
Commaxo B.V. Wilnecker 37, 5482 NG Schijndel, The Netherlands.

Guarantee
Commaxo B.V. offers service and warranty in accordance with the European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products for repairs directly to Commaxo B.V. directly.

Important note: If the unit is opened or sealed by a non-official service center or any, your warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer
Updates of Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description in this documentation.

Disposal of the Old Device

The symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of product and battery, please follow the relevant local regulations for the disposal of your old electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards for environmental protection in the treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

DECLARATION OF CONFORMITY
Hereby, Commaxo declares that the radio equipment type Lenco SCD-32BT(LR) is compliant with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
http://www.lenco-certificates.com/bt/scd-32bt_eu.pdf

Type RF	Frequency range (MHz)	Power (dBm)
Bluetooth	2402-2480	< 6
FM	87.5 -108	< 15

Avoiding hearing damage:
To prevent possible hearing damage, do not listen at high volume levels for long periods.

Disposal
Follow the information and helpdesk support, please visit www.lenco.com
Commaxo B.V. Wilnecker 37, 5482 NG Schijndel, The Netherlands.

Guarantee
Commaxo B.V. offers service and warranty in accordance with the European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products for repairs directly to Commaxo B.V. directly.

Important note: If the unit is opened or sealed by a non-official service center or any, your warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer
Updates of Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description in this documentation.

Disposal of the Old Device

The symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of product and battery, please follow the relevant local regulations for the disposal of your old electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards for environmental protection in the treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

Lenco

Transportables Radio mit CD und Bluetooth
SCD-32 BT

BENUTZERHANDBUCH

Informationen und Infoteilung erhalten Sie unter www.lenco.com

ACHTUNG

LASER-GERÄT DER KLASSE 1

LASER-GERÄT DER KLASSE 1
WARNUNG: IN ZUSATZ ZU DER OFFENGELEGTEN LASERSTRAHLUNG, WENN GEÖFFNET UND VERRIEGELUNG BEHOBEN, KANN UNSICHTBARE LASERSTRAHLUNG AUSGESETZT WERDEN.

VORSICHT
UNSICHTBARE LASERSTRAHLUNG BEI GEÖFFNETEM GERÄT UND GEME FUNKTION
VERMEIDEN SIE EINE EXPOSITION STRAHLUNG

Dieses Gerät enthält eine Kleinleistungslasereinheit.

Warnung: Berühren Sie die Linse nicht.
NICHT WIEDERAUFLADEN IN FEUER !

ACHTUNG

Eine andere als hier beschriebene Bedienung, Einstellung oder Verwendung der Funktionen kann zu gefährlicher Strahlenexposition führen.

VORSICHTSMAßNAHMEN VOR DER BENUTZUNG

BEFOLGEN SIE WEIBER FOLGENDE ANWEISUNGEN:

1. Decken Sie die Belüftungsöffnungen nicht ab. Lassen Sie um das Gerät auf Regal stellen, lassen Sie um das gesamte Gerät 5 cm (2") freier Platz.
2. Stellen Sie das Gerät entsprechend den mitgelieferten Bedienungsanleitung auf.
3. Halten Sie das Gerät von Heizkörpern, Herden, Kochern und anderen wärmeerzeugenden Produkten oder offenen Flammen fern. Das Gerät darf nur bei gemäßigten Klima verwendet werden. Sehr kalte oder heiße Umgebungen sind zu vermeiden. Der Betriebstemperaturbereich liegt zwischen 5 °C und 35 °C. Das Gerät darf nicht in einer feuchten Umgebung betrieben werden.
4. Elektrostatische Entladungen können die normale Verwendung mit diesem Gerät stören. Sollte dies geschehen, schalten Sie das Gerät einfach aus und wieder ein und fahren Sie mit der normalen Bedienung fort. Bei ordnungsgemäßer Bedienung sollte es während der normalen Bedienungsanleitung nicht. Gehen Sie besonders bei Datenübertragungen mit dem Gerät vorsichtig um und führen Sie Daten nur mit einem intakten Kabel und einwandfreiem Betrieb.
5. Warnung! Niemals Gegenstände durch die Lüftungsöffnungen oder Öffnungen in das Gerät stecken. In diesem Gerät fließt Hochspannung und das Hineinstecken von Gegenständen kann zu elektrischen Schock führen! Ausschalten Sie im Zweifelsfall das Gerät und wenden Sie sich an einen qualifizierten Kundendienst. Halten Sie Flüssigkeiten fern.
6. Benutzen Sie das Gerät nicht in nasser oder feuchter Umgebung wie Bad, Geschirrküche oder in der Nähe von Schwimmbecken.
7. Das Gerät darf weder Tropf- noch Spritzwasser ausgesetzt werden und es dürfen keine mit Flüssigkeit gefüllten Behälter wie z.B. Vasen auf das Gerät oder in der Nähe des Gerätes gestellt werden.
8. Wenn Sie das Gerät bei Gewitter benutzen, kann es zu Kondenswasser im Gerät kommen, wodurch kurzzeitig keine Funktionen benutzen. Wenn kommt sich in Innenen des Geräts Wasertropfen oder Kondensationen bilden und zu Funktionsstörungen führen. Lassen Sie das Gerät 1 oder 2 Stunden lang ausgeschaltet, bis die Feuchtigkeit verdampft ist, bevor Sie das Gerät einschalten.
9. Obwohl dieses Gerät unter größter Sorgfalt und von Ausbildung mehrmals überprüft wurde, können trotzdem ein bei Fehlern auftreten. Wenden Sie sich bei Fehlern an Ihren Fachhändler. Im Falle von Betrug oder anderen unerwarteten Erscheinungen sollte unverzüglich Stecker ziehen.
10. Dieses Gerät ist durch eine Stromquelle wie auf dem Typenschild angegeben zu betreiben. Wenden Sie bei Unsicherheit bezüglich der Art der Stromversorgung Ihrer Wohnung an Ihren Fachhändler oder Ihren Stromversorgungsunternehmen.
11. Medien können Haustiere kauen. Einige Haustiere beißen ab, an Netzkabeln zu nagen.
12. Benutzen Sie für die Reinigung ein weiches und trockenes Tuch. Benutzen Sie niemals Lösungsmittel oder Chemikalien, da dies die Gehäuse beschädigen oder Funktionsstörungen verursachen kann. Die Garantie erlischt bei Schäden durch falsche Handhabung oder Modifikation des Geräts oder durch Wechsen der Batterien.
13. Unterbrechen Sie die Verbindung nicht während einer Formatierung oder einer Datenübertragung. Sie Unterbrechung führen Datenverlust und Formatierung.
14. Nieren das Gerät eine USB-Verlängerungskabel benutzt. Gerät ebenfalls Sie den USB-Port direkt in das Gerät. Verwenden Sie nur mitgelieferte Netzkabel und Zubehörteile. Verwenden Sie keine beschädigten Netzkabel.
15. Das Typenschild befindet sich auf der Unter- oder Rückseite des Gerätes.
16. Dieses Gerät darf nicht von Personen (einschließlich Kindern) mit physischen, sensorischen oder mentalen Beeinträchtigungen oder ohne ausreichender Erfahrung verwendet, es sei denn, sie werden durch eine verantwortliche Person beaufsichtigt oder sie erhalten von der verantwortlichen Bedienung des Gerätes durch eine für ihre Sicherheit verantwortliche Person eingewiesen.
17. Dieses Produkt ist nur für den nichtgewerblichen Gebrauch und nicht für gewerbliche oder industrielle Zwecke bestimmt.
18. Eigenmächtige Veränderungen an diesem Gerät können zu Störungen der Funkwellenausstrahlung führen. Wenn Sie eine Gerät und auf Regal stellen, lassen Sie um das gesamte Gerät 5 cm (2") freier Platz.
19. Wenn Sie das Gerät eingeschaltet den Anweisungen der mitgelieferten Bedienungsanleitung auf.
20. Versuchen Sie nie, das Gerät selbst zu reparieren. Es gibt keine zu wartenden Bauteile. Wenden Sie sich bei Produktfehlern oder Pflichten an Ihren Fachhändler. Sehr kalte oder heiße Umgebungen sind zu vermeiden. Der Betriebstemperaturbereich liegt zwischen 5 °C und 35 °C. Das Gerät darf nicht in einer feuchten Umgebung betrieben werden.
21. Elektrostatische Entladungen können die normale Verwendung mit diesem Gerät stören. Sollte dies geschehen, schalten Sie das Gerät einfach aus und wieder ein und fahren Sie mit der normalen Bedienung fort. Bei ordnungsgemäßer Bedienung sollte es während der normalen Bedienungsanleitung nicht. Gehen Sie besonders bei Datenübertragungen mit dem Gerät vorsichtig um und führen Sie Daten nur mit einem intakten Kabel und einwandfreiem Betrieb.
22. Warnung! Niemals Gegenstände durch die Lüftungsöffnungen oder Öffnungen in das Gerät stecken. In diesem Gerät fließt Hochspannung und das Hineinstecken von Gegenständen kann zu elektrischen Schock führen! Ausschalten Sie im Zweifelsfall das Gerät und wenden Sie sich an einen qualifizierten Kundendienst. Halten Sie Flüssigkeiten fern.
23. Benutzen Sie das Gerät nicht in nasser oder feuchter Umgebung wie Bad, Geschirrküche oder in der Nähe von Schwimmbecken.
24. Das Gerät darf weder Tropf- noch Spritzwasser ausgesetzt werden und es dürfen keine mit Flüssigkeit gefüllten Behälter wie z.B. Vasen auf das Gerät oder in der Nähe des Gerätes gestellt werden.
25. Wenn Sie das Gerät bei Gewitter benutzen, kann es zu Kondenswasser im Gerät kommen, wodurch kurzzeitig keine Funktionen benutzen. Wenn kommt sich in Innenen des Geräts Wasertropfen oder Kondensationen bilden und zu Funktionsstörungen führen. Lassen Sie das Gerät 1 oder 2 Stunden lang ausgeschaltet, bis die Feuchtigkeit verdampft ist, bevor Sie das Gerät einschalten.
26. Obwohl dieses Gerät unter größter Sorgfalt und von Ausbildung mehrmals überprüft wurde, können trotzdem ein bei Fehlern auftreten. Wenden Sie sich bei Fehlern an Ihren Fachhändler. Im Falle von Betrug oder anderen unerwarteten Erscheinungen sollte unverzüglich Stecker ziehen.
27. Dieses Gerät darf nur mit dem Stromquelle wie auf dem Typenschild angegeben zu betreiben. Wenden Sie bei Unsicherheit bezüglich der Art der Stromversorgung Ihrer Wohnung an Ihren Fachhändler oder Ihren Stromversorgungsunternehmen.
28. Lassen Sie Haustiere nicht an Netzkabeln kauen. Einige Haustiere beißen ab, an Netzkabeln zu nagen.
29. Benutzen Sie für die Reinigung ein weiches und trockenes Tuch. Benutzen Sie niemals Lösungsmittel oder Chemikalien, da dies die Gehäuse beschädigen oder Funktionsstörungen verursachen kann. Die Garantie erlischt bei Schäden durch falsche Handhabung oder Modifikation des Geräts oder durch Wechsen der Batterien.
30. Unterbrechen Sie die Verbindung nicht während einer Formatierung oder einer Datenübertragung. Sie Unterbrechung führen Datenverlust und Formatierung.
31. Nieren das Gerät eine USB-Verlängerungskabel benutzt. Gerät ebenfalls Sie den USB-Port direkt in das Gerät. Verwenden Sie nur mitgelieferte Netzkabel und Zubehörteile. Verwenden Sie keine beschädigten Netzkabel.
32. Das Typenschild befindet sich auf der Unter- oder Rückseite des Gerätes.
33. Dieses Gerät darf nicht von Personen (einschließlich Kindern) mit physischen, sensorischen oder mentalen Beeinträchtigungen oder ohne ausreichender Erfahrung verwendet, es sei denn, sie werden durch eine verantwortliche Person beaufsichtigt oder sie erhalten von der verantwortlichen Bedienung des Gerätes durch eine für ihre Sicherheit verantwortliche Person eingewiesen.

WIEDERVERLINGSFUNKTION

Mit dieser Funktion kann eine bestimmte Nummer oder können die Nummern der CD wiederholt werden.

UM EINEN TITEL ZU WIEDERHOLEN
Drücken Sie die Repeat Taste während des Abspielens der Wiedergabe, die Repeat Anzeige leuchtet auf und blinkt.

UM DIE REPEAT EINSTELLUNGEN ZU LÖSCHEN
Drücken Sie die Repeat Taste nochmal bis die Anzeige nicht mehr leuchtet.

UM DIE GANZE DISC ZU WIEDERHOLEN
Drücken Sie die Repeat Taste zweimal bis die Anzeige aufleuchtet.

Anmerkung zu CD-Rw/CD-Rfm:
Die die Schreibqualität der CD-Rw/CD-Rfm nicht standardisiert sind, kann nicht für die Wiedergabequalität und das Betriebsverhalten der CDs garantiert werden.
Der Hersteller ist aufgrund der Aufnahmebedingungen, wie PC, Performance, Software und der Qualität der Medien nicht für die Wiedergabefähigkeit der CD-Rw/CD-Rfm verantwortlich.
Bringen Sie auf keine Seite einer CD-Rw/CD-Rfm irgendwelche Aufkleber oder Etiketten an. Dies kronne zu Funktionsfehlern führen.
Um die Wiedergabe zu vereinfachen empfehlen wir daher, CD-Rw/CD-CDs zu verwenden, die keine Audio-Dateien enthalten.

BASSVERSTÄRKUNG

Drücken Sie Die einen Bassaufheben mit Bassverstärkung die Bassverstärkungstaste.

PROGRAMMIERTE WIEDERGABE

PROGRAMMIERTE WIEDERGABE
1. Drücken Sie die Programmtaste im Stopmodus oder nach dem Ende der Wiedergabe in gewünschter Reihenfolge. Sie können bis zu 20 Titel programmieren.
2. Drücken Sie die Programmtaste NEXT zum Auswählen der gewünschten Titelnummer.
3. Drücken Sie die PROGRAMM Taste, um den jeweiligen Titel zu speichern.
4. Wiederholen Sie die Schritte 2 und 3 solange, bis Sie alle gewünschten Titel programmiert haben.
5. Drücken Sie die WIEDERGABE/PAUSE. Starten der programmierten Wiedergabe. Drücken Sie die STOP Taste (PROGRAMMIERUNG) zweimal um den CD-Display angezeigt.
6. Drücken Sie einmal die STOP. Taste, um die programmierte Wiedergabe zu beenden.
7. Drücken Sie die WIEDERGABE/PAUSE. Taste, um die programmierte Wiedergabe fortzusetzen.
8. Drücken Sie die STOP Taste zweimal, um den CD-Player zu stoppen oder drücken Sie zweimal die STOP Taste, um die programmierte Wiedergabe zu löschen.

Hinweis: Sie können den CD-Player nur programmieren, wenn der Wiedergabe gestoppt ist.

DE 4

BLUETOOTH-BETRIEB

1. Stellen Sie den Schalter auf die Funktion FUNCTION

2. Drücken Sie die Taste zum Aktivieren von Bluetooth ( ) für ca. 2 Sekunden.

- Wenn Sie das Gerät das nächste Mal einschalten, stellt es automatisch eine Verbindung zu dem zuletzt gekoppelten Gerät.
- Die Musikübertragung kann durch Hindernisse (bei dem Benutzer und dem Gerät, wie z. B. Wände, oder durch andere Geräte in der Nähe, die dieselbe Frequenz nutzen, unterbrochen werden.

Das Gerät schaltet sich nach 10 Minuten Inaktivität automatisch aus.

DER RICHTIGE UMGANG MIT CDs

CDs müssen mit Sorgfalt behandelt werden. Schmutz, Staub und Kratzer können die Wiedergabequalität beeinflussen. Nach dem Abspielen sollte CD einverschlossen und die Tonqualität beeinflussen. Nach dem Abspielen einer CD diese Hinweise sollten eeachte in Ihrer Nähe legen.

HINWEIS: In dieses CD-Spieler können ausschließlich CDs mit runder Form abgespielt werden.

- CDs immer an den Rändern anfassen. Die Oberfläche NICHT berühren und nicht mit Papier oder Etiketten beklebbar.
- Fingerabdrücke und Staub auf der Tonlagendoberfläche vorsichtig mit einem weichen, trockenen Tuch in einer geraden Linie von der Mitte zum Rande hin. Keinerlei Reinigungsmittel verwenden, diese wirkten die CD ebenfalls an.
- Um Verzerrungen der CD zu vermeiden, setzen Sie diese niemals längere Zeit direkter Sonne, extremen Temperaturen oder Feuchtigkeit aus.

VORSICHT
Um Beschädigung der CDs zu vermeiden, nie das CD-Fach öffnen, es hinge sich die CD noch dort.

DE 6

BEDIENELEMENTE

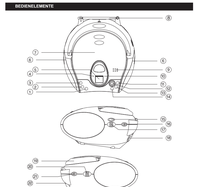

1. CD-PROGRAMM
2. CD-WIEDERHOLSTATE
3. BASSVERSTÄRKUNGSTASTE
4. STOP/TUNING ANZEIGE
5. CD-ANZEIGEFENSTER
6. DYNAMISCHER LAUTSPRECHER
7. NETZKABEL
8. TELESKOPANTENNE
9. CD-FACH ÖFFNEN/SCHLIESSEN
10. ▶II WIEDERGABE/PAUSE
11. NEXT/FF SUCHLAUF
12. I◀◀ CD-WIEDERGABE / PAUSE / SUCHLAUFSTATE
13. ■ STOP / BLUETOOTH ( ) TASTE
14. FUNCTIONSTASTE
15. MODE SWITCH
16. EINSTELLANZEIGE
17. LAUTSTÄRKE / TUNINGKNOPF
18. TRAGEGRIFF
19. STROMANZEIGE
20. LAUTSTÄRKE
21. FUNKTIONSWAHL
22. KOPFHÖRERBUCHSE
23. BATTERIEFACHDECKEL

DE 1

STROMVERSORGUNG

AC Netzanschluß
Vor Inbetriebnahme sollte sich der gelieferte Netzanschluß mit der Netzspannung Ihrer Steckdose (Typ. 230 V~ 50 Hz) übereinstimmen. Wenn Sie Zweifel haben, wenden Sie sich bitte an Ihren Fachhändler oder Ihren Stromversorgungsunternehmen.

Wenn Sie das Netzkabel an das Gerät anschließen, stellen Sie sicher, daß der Netzstecker vollständig in die Netzkabelbuchse eingesteckt ist.

Batterien (Optional)
Wenn Sie das Gerät mit Batterien betreiben, legen Sie 6 x 1.5V UM-2(C(LR14)) Batterien ein.

Wenn Sie das Gerät mit Batterien betreiben, beachten Sie Polarität (+ und -) und legen Sie die Batterien ein. Wenn Sie das Gerät für einen längeren Zeitraum nicht benutzen, sollten Sie Batterien aus dem Gerät entfernen. Verwenden Sie keine Batterien mit einer anderen Spannung.

Wechseln Batterien nicht gemischt mit neuen gegebenen Batterieeinsatz ein. Verwenden Sie keine Batterien mit unterschiedlichen Typen. Verwenden Sie keine alten und neuen Batterien zusammen.
Wenn Sie das Gerät für einen längeren Zeitraum nicht benutzen, sollten Sie Batterien aus dem Gerät entfernen. Verwenden Sie keine Batterien mit einer anderen Spannung.
Batterien sind Sondermüll. Bringen Sie Batterien zu einer Sammelstelle für Altbatterien.
Batterien dürfen nicht ins Feuer geworfen werden.
Batterien dürfen nicht kurzgeschlossen werden.
Batterien dürfen nicht geöffnet werden.
Batterien dürfen nicht überhitzt werden.
Batterien dürfen nicht zerlegt werden.
Batterien dürfen nicht aufgeladen werden.
Batterien dürfen nicht mit anderen Batterien gemischt werden.
Batterien dürfen nicht in Wasser gelegt werden.
Batterien dürfen nicht in Kurzschluss gebracht werden.
Batterien dürfen nicht in Kurzschluss gebracht werden.
Batterien dürfen nicht in Kurzschluss gebracht werden.
Batterien dürfen nicht in Kurzschluss gebracht werden.
Batterien dürfen nicht in Kurzschluss gebracht werden.
Batterien dürfen nicht in K